Technical Information Ceraphant PTC31B, PTP31B

Process pressure measurement





Pressure switch for safe measurement and monitoring of absolute and gauge pressure

Application

The Ceraphant is a pressure switch for the measurement of absolute and gauge pressure in gases, vapors, liquids and dust. The Ceraphant can be used internationally thanks to a wide range of approvals and process connections.

Your benefits

- High reproducibility and long-term stability
- Reference accuracy: up to 0.3%
- Customized measuring ranges
 - Turn down up to 5:1
 - Sensor for measuring ranges up to 400 bar (6000 psi)
- Housing and process isolating diaphragm made of 316L
- Optionally available with IO-Link

Operation and electrical connection in accordance with VDMA 24574-1:2008



Table of contents

Document information		Measuring uncertainty for small absolute pressure	
Document function	4	measuring ranges	22
Symbols used	4	Influence of the installation position	
Documentation	. 5	Resolution	22
Terms and abbreviations	6	Reference accuracy	22
Turn down calculation		Thermal change of the zero output and the output span	22
		Long-term stability	22
Franctica and section decision		Switch-on time	
Function and system design			
Measuring principle - process pressure measurement		Installation	22
Measuring system		Installation	
Device features		Installation conditions	
Product design	I	Influence of the installation position	
System integration	11	Mounting location	
		Mounting instructions for oxygen applications	25
Input	12		
Measured variable		Environment	26
Measuring range		Ambient temperature range	
wicuburing runge	12		
			26
	14	Degree of protection	
Output signal	14	Vibration resistance	
Range of adjustment	14	Electromagnetic compatibility	
Switching capacity	14	Electromagnetic compatibility	20
Signal range 4 to 20 mA	14		
		Process	27
Signal on alarm 4 to 20 mA		Process temperature range for devices with ceramic	
Dead time, time constant		process isolating diaphragm	27
Dynamic behavior		Process temperature range for devices with metallic	
Dynamic behavior of switch output		process isolating diaphragm	27
Damping		Pressure specifications	
r			
		-	
D		Machanical construction	20
11 3	17	Mechanical construction	
Terminal assignment	17 17	Design, dimensions	28
Terminal assignment	17 17 18	Design, dimensions	28 28
Terminal assignment	17 17 18 18	Design, dimensions	28 28
Terminal assignment	17 17 18 18 18	Design, dimensions	28 28 29
Terminal assignment	17 17 18 18 18 18	Design, dimensions	28 28 29
Terminal assignment	17 17 18 18 18 18	Design, dimensions	28 28 29 30
Terminal assignment	17 17 18 18 18 18 19 19	Design, dimensions	28 28 29 30
Terminal assignment Supply voltage Current consumption and alarm signal Power supply fault Electrical connection Cable specification Residual ripple Influence of power supply	17 17 18 18 18 18 19 19	Design, dimensions	28 28 29 30 31
Terminal assignment Supply voltage Current consumption and alarm signal Power supply fault Electrical connection Cable specification Residual ripple Influence of power supply	17 17 18 18 18 18 19 19	Design, dimensions	28 28 29 30 31
Terminal assignment Supply voltage Current consumption and alarm signal Power supply fault Electrical connection Cable specification Residual ripple Influence of power supply	17 17 18 18 18 18 19 19	Design, dimensions	28 28 29 30 31
Terminal assignment Supply voltage Current consumption and alarm signal Power supply fault Electrical connection Cable specification Residual ripple Influence of power supply Overvoltage protection	17 17 18 18 18 18 19 19	Design, dimensions	28 28 29 30 31
Terminal assignment Supply voltage Current consumption and alarm signal Power supply fault Electrical connection Cable specification Residual ripple Influence of power supply Overvoltage protection Performance characteristics of ceramic process	17 17 18 18 18 18 19 19 19	Design, dimensions	28 28 29 30 31 32
Terminal assignment Supply voltage Current consumption and alarm signal Power supply fault Electrical connection Cable specification Residual ripple Influence of power supply Overvoltage protection Performance characteristics of ceramic process isolating diaphragm	17 17 18 18 18 18 19 19 19	Design, dimensions	28 28 29 30 31 32
Terminal assignment Supply voltage Current consumption and alarm signal Power supply fault Electrical connection Cable specification Residual ripple Influence of power supply Overvoltage protection Performance characteristics of ceramic process isolating diaphragm Reference operating conditions	17 17 18 18 18 18 19 19 19	Design, dimensions	28 28 29 30 31 32
Terminal assignment Supply voltage Current consumption and alarm signal Power supply fault Electrical connection Cable specification Residual ripple Influence of power supply Overvoltage protection Performance characteristics of ceramic process isolating diaphragm Reference operating conditions Measuring uncertainty for small absolute pressure	17 17 18 18 18 18 19 19 19 19 20	Design, dimensions	28 28 29 30 31 32
Terminal assignment Supply voltage Current consumption and alarm signal Power supply fault Electrical connection Cable specification Residual ripple Influence of power supply Overvoltage protection Performance characteristics of ceramic process isolating diaphragm Reference operating conditions Measuring uncertainty for small absolute pressure measuring ranges	17 17 18 18 18 18 19 19 19 19 20 20	Design, dimensions	28 28 29 30 31 32 32
Terminal assignment Supply voltage Current consumption and alarm signal Power supply fault Electrical connection Cable specification Residual ripple Influence of power supply Overvoltage protection Performance characteristics of ceramic process isolating diaphragm Reference operating conditions Measuring uncertainty for small absolute pressure measuring ranges Influence of the installation position	17 17 18 18 18 18 19 19 19 20 20 20 20	Design, dimensions	28 28 29 30 31 32 32
Terminal assignment Supply voltage Current consumption and alarm signal Power supply fault Electrical connection Cable specification Residual ripple Influence of power supply Overvoltage protection Performance characteristics of ceramic process isolating diaphragm Reference operating conditions Measuring uncertainty for small absolute pressure measuring ranges Influence of the installation position Resolution	17 17 18 18 18 18 19 19 19 20 20 20 20 20	Design, dimensions	28 28 30 31 32 32 33
Terminal assignment Supply voltage Current consumption and alarm signal Power supply fault Electrical connection Cable specification Residual ripple Influence of power supply Overvoltage protection Performance characteristics of ceramic process isolating diaphragm Reference operating conditions Measuring uncertainty for small absolute pressure measuring ranges Influence of the installation position Resolution Reference accuracy	17 17 18 18 18 18 19 19 19 20 20 20 20 20 20 20	Design, dimensions	28 28 30 31 32 32 33
Terminal assignment Supply voltage Current consumption and alarm signal Power supply fault Electrical connection Cable specification Residual ripple Influence of power supply Overvoltage protection Performance characteristics of ceramic process isolating diaphragm Reference operating conditions Measuring uncertainty for small absolute pressure measuring ranges Influence of the installation position Resolution Reference accuracy Thermal change of the zero output and the output span	17 17 18 18 18 18 19 19 19 20 20 20 20 20 20 20 20 20	Design, dimensions	28 28 29 30 31 32 32 33 34 35
Terminal assignment Supply voltage Current consumption and alarm signal Power supply fault Electrical connection Cable specification Residual ripple Influence of power supply Overvoltage protection Performance characteristics of ceramic process isolating diaphragm Reference operating conditions Measuring uncertainty for small absolute pressure measuring ranges Influence of the installation position Resolution Reference accuracy Thermal change of the zero output and the output span Long-term stability	17 17 18 18 18 18 19 19 19 20 20 20 20 20 20 20 20 20	Design, dimensions	28 28 29 30 31 32 32 33 34 35
Terminal assignment Supply voltage Current consumption and alarm signal Power supply fault Electrical connection Cable specification Residual ripple Influence of power supply Overvoltage protection Performance characteristics of ceramic process isolating diaphragm Reference operating conditions Measuring uncertainty for small absolute pressure measuring ranges Influence of the installation position Reference accuracy Thermal change of the zero output and the output span	17 17 18 18 18 18 19 19 19 20 20 20 20 20 20 20 20 20	Design, dimensions	28 28 29 30 31 32 32 33 34 35
Terminal assignment Supply voltage Current consumption and alarm signal Power supply fault Electrical connection Cable specification Residual ripple Influence of power supply Overvoltage protection Performance characteristics of ceramic process isolating diaphragm Reference operating conditions Measuring uncertainty for small absolute pressure measuring ranges Influence of the installation position Resolution Reference accuracy Thermal change of the zero output and the output span Long-term stability	17 17 18 18 18 18 19 19 19 20 20 20 20 20 20 20 20 20	Design, dimensions	28 28 29 30 31 32 32 33 34 35 36 37
Terminal assignment Supply voltage Current consumption and alarm signal Power supply fault Electrical connection Cable specification Residual ripple Influence of power supply Overvoltage protection Performance characteristics of ceramic process isolating diaphragm Reference operating conditions Measuring uncertainty for small absolute pressure measuring ranges Influence of the installation position Resolution Reference accuracy Thermal change of the zero output and the output span Long-term stability Switch-on time	17 17 18 18 18 18 19 19 19 20 20 20 20 20 20 20 20 20	Design, dimensions	28 28 29 30 31 32 32 33 34 35 36 37 38
Terminal assignment Supply voltage Current consumption and alarm signal Power supply fault Electrical connection Cable specification Residual ripple Influence of power supply Overvoltage protection Performance characteristics of ceramic process isolating diaphragm Reference operating conditions Measuring uncertainty for small absolute pressure measuring ranges Influence of the installation position Resolution Reference accuracy Thermal change of the zero output and the output span Long-term stability Switch-on time Performance characteristics of metal process	17 17 18 18 18 18 19 19 19 19 20 20 20 20 20 20 21	Design, dimensions	28 28 29 30 31 32 32 33 34 35 36 37
Terminal assignment Supply voltage Current consumption and alarm signal Power supply fault Electrical connection Cable specification Residual ripple Influence of power supply Overvoltage protection Performance characteristics of ceramic process isolating diaphragm Reference operating conditions Measuring uncertainty for small absolute pressure measuring ranges Influence of the installation position Reference accuracy Thermal change of the zero output and the output span Long-term stability Switch-on time Performance characteristics of metal process isolating diaphragm	17 17 18 18 18 18 19 19 19 19 20 20 20 20 20 20 21 20 20 21	Design, dimensions Electrical connection Housing Process connections with internal, ceramic process isolating diaphragm Process connections with internal, metal process isolating diaphragm Materials in contact with process Materials not in contact with process Cleaning Cleaning	28 28 29 30 31 32 32 33 34 35 36 37 38 39
Terminal assignment Supply voltage Current consumption and alarm signal Power supply fault Electrical connection Cable specification Residual ripple Influence of power supply Overvoltage protection Performance characteristics of ceramic process isolating diaphragm Reference operating conditions Measuring uncertainty for small absolute pressure measuring ranges Influence of the installation position Resolution Reference accuracy Thermal change of the zero output and the output span Long-term stability Switch-on time Performance characteristics of metal process isolating diaphragm	17 17 18 18 18 18 19 19 19 19 20 20 20 20 20 20 21	Design, dimensions Electrical connection Housing Process connections with internal, ceramic process isolating diaphragm Process connections with internal, metal process isolating diaphragm Materials in contact with process Materials not in contact with process Cleaning Cleaning	28 28 29 30 31 32 32 33 34 35 36 37 38 39 40

Operation with local display	40
Device Search (IO-Link)	41
Functions of switch output	42
1	
Contification and amounts	
Certificates and approvals	
<u></u>	
RoHS	
RCM-Tick marking	44
Pressure Equipment Directive 2014/68/EU (PED)	44
Other standards and guidelines	45
CRN approval	45
Calibration unit	45
Calibration	46
Inspection certificates	46
•	
Ordering information	1.6
Scope of delivery	40
A	4.5
Accessories	
Weld-in adapter	47
M12 plug connectors	47
Documentation	48
Field of Activities	48
Technical Information	48
Operating Instructions	48
Brief Operating Instructions	48
Registered trademarks	48

Document information

Document function

The document contains all the technical data on the device and provides an overview of the accessories and other products that can be ordered for the device.

Symbols used

Safety symbols

Symbol	Meaning
▲ DANGER	DANGER! This symbol alerts you to a dangerous situation. Failure to avoid this situation will result in serious or fatal injury.
▲ WARNING	WARNING! This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in serious or fatal injury.
▲ CAUTION	CAUTION! This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in minor or medium injury.
NOTICE	NOTICE! This symbol contains information on procedures and other facts which do not result in personal injury.

Electrical symbols

Symbol	Meaning	Symbol	Meaning
	Protective ground connection A terminal which must be connected to ground prior to establishing any other connections.	4	Ground connection A grounded terminal which, as far as the operator is concerned, is grounded via a grounding system.

Symbols for certain types of information

Symbol	Meaning
\checkmark	Permitted Procedures, processes or actions that are permitted.
X	Forbidden Procedures, processes or actions that are forbidden.
i	Tip Indicates additional information.
Î	Reference to documentation
A	Reference to page
	Reference to graphic
	Visual inspection

Symbols in graphics

Symbol	Meaning
1, 2, 3	Item numbers
1. , 2. , 3	Series of steps
A, B, C,	Views

Documentation



The document types listed are available:

In the Download Area of the Endress+Hauser Internet site: www.endress.com → Download

Brief Operating Instructions (KA): getting the 1st measured value quickly


Devices with IO-Link: KA01404P

These instructions contain all the essential information from incoming acceptance to initial commissioning (not for devices with IO-Link).

Operating Instructions (BA): your comprehensive reference

These Operating Instructions contain all the information that is required in various phases of the life cycle of the device: from product identification, incoming acceptance and storage, to mounting, connection, operation and commissioning through to troubleshooting, maintenance and disposal.


Terms and abbreviations

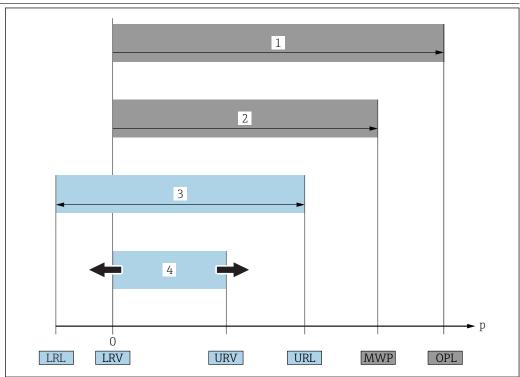

A0029505

Item	Term/ abbreviation	Explanation
1	OPL	The OPL (over pressure limit = sensor overload limit) for the measuring device depends on the lowest-rated element, with regard to pressure, of the selected components, i.e. the process connection has to be taken into consideration in addition to the measuring cell. Also observe pressure-temperature dependency. For the relevant standards and additional notes, see the "Pressure specifications" section $\rightarrow \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ $
2	MWP	The MWP (maximum working pressure) for the sensors depends on the lowest-rated element, with regard to pressure, of the selected components, i.e. the process connection has to be taken into consideration in addition to the measuring cell. Also observe pressure-temperature dependency. For the relevant standards and additional notes, see the "Pressure specifications" section $\Rightarrow \boxdot 27$. The MWP may be applied at the device for an unlimited period. The MWP can also be found on the nameplate.
3	Maximum sensor measuring range	Span between LRL and URL This sensor measuring range is equivalent to the maximum calibratable/adjustable span.
4	Calibrated/adjusted span	Span between LRV and URV Factory setting: 0 to URL Other calibrated spans can be ordered as customized spans.
р	-	Pressure
-	LRL	Lower range limit
-	URL	Upper range limit
-	LRV	Lower range value
-	URV	Upper range value
-	TD (turn down)	Turn down Example - see the following section.

Turn down calculation



- 1 Calibrated/adjusted span
- 2 Zero point-based span
- 3 URL sensor

Example

- Sensor:10 bar (150 psi)
- Upper range value (URL) = 10 bar (150 psi)

Turn down (TD):

- Lower range value (LRV) = 0 bar (0 psi)
- Upper range value (URV) = 5 bar (75 psi)

$$TD = \frac{URL}{|URV|} - \frac{LRV}{|URV|}$$

TD =
$$\frac{10 \text{ bar (150 psi)}}{|5 \text{ bar (75 psi)} - 0 \text{ bar (0 psi)}|} = 2$$

In this example, the TD is 2:1.

This span is based on the zero point.

Function and system design


Measuring principle process pressure measurement

Devices with ceramic process isolating diaphragm (Ceraphire®)

The ceramic sensor is an oil-free sensor, i.e. the process pressure acts directly on the robust ceramic process isolating diaphragm and causes it to deflect. A pressure-dependent change in capacitance is measured at the electrodes of the ceramic substrate and the process isolating diaphragm. The measuring range is determined by the thickness of the ceramic process isolating diaphragm.

Advantages:

- Guaranteed overload resistance up to 40 times the nominal pressure
- The ultrapure 99.9% ceramic (Ceraphire®, see also "www.endress.com/ceraphire") ensures:
 - Extremely high chemical durability
 - High mechanical durability
- Can be used in absolute vacuum
- Small measuring ranges

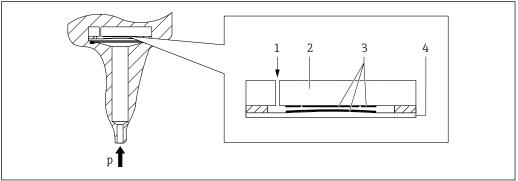

A002046


- 1 Air pressure (gauge pressure sensors)
- 2 Ceramic substrate
- 3 Electrodes
- 4 Ceramic process isolating diaphragm

Devices with metallic process isolating diaphragm

The process pressure deflects the metal process isolating diaphragm of the sensor and a fill fluid transfers the pressure to a Wheatstone bridge (semiconductor technology). The pressure-dependent change in the bridge output voltage is measured and evaluated.

Advantages:

- Can be used for high process pressures
- Fully welded sensor
- Slim, flush-mounted process connections available

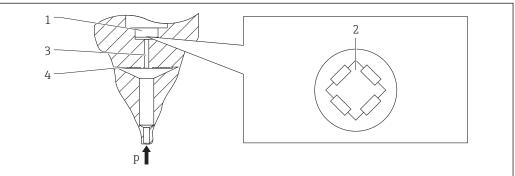


A001644

- 1 Silicon measuring element, substrate
- 2 Wheatstone bridge
- 3 Channel with fill fluid
- 4 Metal process isolating diaphragm

Measuring system

A complete measuring system comprises:

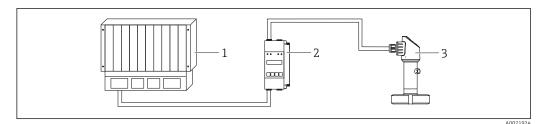

1 PLC (programmable logic control)

- 2 e.g. RMA42 / RIA45 (if required)
- 3 Device

Device features

Field of application

- PTC31B: Gauge and absolute pressure
- PTP31B: Gauge and absolute pressure

Process connections

PTC31B:

- Thread
- Thread ANSI
- Thread M24 x 1.5
- Thread JIS

PTP31B:

- Thread ISO 228, also flush-mount
- Thread ASME
- Thread DIN 13
- Thread ASME
- Thread JIS

Measuring ranges

- PTC31B: from 0 to +100 mbar (0 to +1.5 psi) to 0 to +40 bar (0 to +600 psi).
- PTP31B: from 0 to +400 mbar (0 to +6 psi) to 0 to +400 bar (0 to +6000 psi).

OPL (depends on the measuring range)

- PTC31B: max. 0 to +60 bar (0 to +900 psi)
- PTP31B: max. 0 to +600 bar (0 to +9000 psi)

MWP

- PTC31B: max. 0 to +40 bar (0 to +600 psi)
- PTP31B: max. 0 to +40 bar (0 to +600 psi)

Process temperature range (temperature at process connection)

- PTC31B: -25 to +100 °C (-13 to +212 °F)
- PTP31B: -40 to +100 °C (-40 to +212 °F)

Ambient temperature range

PTC31B: -20 to +70 °C (-4 to +158 °F)(in the range of the temperature limits with restrictions in optical properties, such as display speed and contrast)

PTP31B: -20 to +70 °C (-4 to +158 °F)(in the range of the temperature limits with restrictions in optical properties, such as display speed and contrast)

Reference accuracy

- PTC31B: standard: up to 0.5 %; platinum: up to 0.3 %
- PTP31B: standard: up to 0.5 %; platinum: up to 0.3 %

Supply voltage

PTC31B: 10 to 30 V DC

PTC31B IO-Link: 10 to 30 V DC at a DC power unit

PTP31B: 10 to 30 V DC

PTB31B IO-Link: 10 to 30 V DC at a DC power unit

IO-Link communication is guaranteed only if the supply voltage is at least 18 V.

Output

Devices with IO-Link:

c/Q output for communication (SIO mode (switch output))

PTC31B

- 1 x PNP switch output (three-wire) (not with IO-Link)
- 2 x PNP switch output (four-wire), IO-Link
- 1 x PNP switch output + 4 to 20 mA output (four-wire), IO-Link

PTP31B:

- 1 x PNP switch output (three-wire) (not with IO-Link)
- 2 x PNP switch output (four-wire), IO-Link
- 1 x PNP switch output + 4 to 20 mA output (four-wire), IO-Link

Material

PTC31B:

- Housing made from 316L (1.4404)
- Process connections made from 316L
- \blacksquare Process isolating diaphragm made from $\rm Al_2O_3$ aluminum-oxide ceramic, (Ceraphire®), ultrapure 99.9 %

PTP31B:

- Housing made from 316L (1.4404)
- Process connections made from 316L (1.4404)
- Process isolating diaphragm made from 316L (1.4435)

Options


PTC31B:

- Certificate of calibration
- Cleaned from oil+grease
- Min. alarm current setting
- 3.1 Material certificates
- Cleaned for O₂ service
- IO-Link

PTP31B:

- Certificate of calibration
- Cleaned from oil+grease
- Min. alarm current setting
- 3.1 Material certificates
- IO-Link

Product design

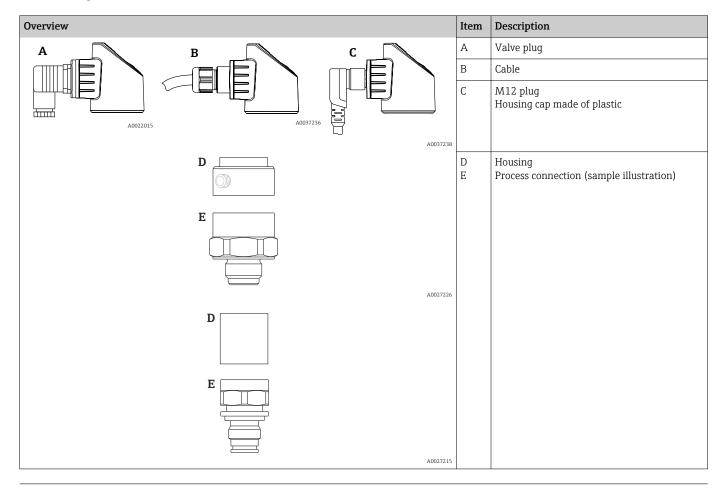

System integration

The device can be given a tag name (max. 32 alphanumeric characters).

Designation	Option 1)
Measuring point (TAG), see additional specifications	Z1

1) Product Configurator order code for "Marking"

Input

Measured variable

Measured process variable

Gauge pressure or absolute pressure

Calculated process variable

Pressure

Measuring range

Ceramic process isolating diaphragm

Sensor	Device	Maximum Sensor meas	uring range	Lowest calibratable	MWP	OPL	Factory settings ²⁾	Option 3)
		lower (LRL)	upper (URL)	span 1)				
		[bar (psi)]	[bar (psi)]	[bar (psi)]	[bar (psi)]	[bar (psi)]		
Devices for gauge pres	sure mea	surement						
100 mbar (1.5 psi) 4)	PTC31B	-0.1 (-1.5)	+0.1 (+1.5)	0.02 (0.3)	2.7 (40.5)	4 (60)	0 to 100 mbar (0 to 1.5 psi)	1C
250 mbar (4 psi) 5)	PTC31B	-0.25 (-4)	+0.25 (+4)	0.05 (1)	3.3 (49.5)	5 (75)	0 to 250 mbar (0 to 4 psi)	1E
400 mbar (6 psi) 6)	PTC31B	-0.4 (-6)	+0.4 (+6)	0.08 (1.2)	5.3 (79.5)	8 (120)	0 to 400 mbar (0 to 6 psi)	1F
1 bar (15 psi) 6)	PTC31B	-1 (-15)	+1 (+15)	0.2 (3)	6.7 (100.5)	10 (150)	0 to 1 bar (0 to 15 psi)	1H
2 bar (30 psi) 6)	PTC31B	-1 (-15)	+2 (+30)	0.4 (6)	12 (180)	18 (270)	0 to 2 bar (0 to 30 psi)	1K
4 bar (60 psi) 6)	PTC31B	-1 (-15)	+4 (+60)	0.8 (12)	16.7 (250.5)	25 (375)	0 to 4 bar (0 to 60 psi)	1M
10 bar (150 psi) 6)	PTC31B	-1 (-15)	+10 (+150)	2 (30)	26.7 (400.5)	40 (600)	0 to 10 bar (0 to 150 psi)	1P
40 bar (600 psi) 6)	PTC31B	-1 (-15)	+40 (+600)	8 (120)	40 (600)	60 (900)	0 to 40 bar (0 to 600 psi)	1S
Devices for absolute p	ressure m	easurement						
100 mbar (1.5 psi) 6)	PTC31B	0	+0.1 (+1.5)	0.1 (1.5)	2.7 (40.5)	4 (60)	0 to 100 mbar (0 to 1.5 psi)	2C
250 mbar (4 psi) 6)	PTC31B	0	+0.25 (+4)	0.25 (4)	3.3 (49.5)	5 (75)	0 to 250 mbar (0 to 4 psi)	2E
400 mbar (6 psi) 6)	PTC31B	0	+0.4 (+6)	0.4 (6)	5.3 (79.5)	8 (120)	0 to 400 mbar (0 to 6 psi)	2F
1 bar (15 psi) 6)	PTC31B	0	+1 (+15)	0.4 (6)	6.7 (100.5)	10 (150)	0 to 1 bar (0 to 15 psi)	2H
2 bar (30 psi) 6)	PTC31B	0	+2 (+30)	0.4 (6)	12 (180)	18 (270)	0 to 2 bar (0 to 30 psi)	2K
4 bar (60 psi) 6)	PTC31B	0	+4 (+60)	0.8 (12)	16.7 (250.5)	25 (375)	0 to 4 bar (0 to 60 psi)	2M
10 bar (150 psi) 6)	PTC31B	0	+10 (+150)	2 (30)	26.7 (400.5)	40 (600)	0 to 10 bar (0 to 150 psi)	2P
40 bar (600 psi) 6)	PTC31B	0	+40 (+600)	8 (120)	40 (600)	60 (900)	0 to 40 bar (0 to 600 psi)	2S

- 1) Highest turn down that can be set at the factory: 5:1. The turn down is preset and cannot be changed.
- 2) Other measuring ranges (e.g. -1 to +5 bar (-15 to 75 psi)) can be ordered with customer-specific settings (see the Product Configurator, order code for "Calibration; Unit" option "U"). It is possible to invert the output signal (LRV = 20 mA; URV = 4 mA). Prerequisite: URV < LRV
- 3) Product Configurator, order code for "Sensor range"
- 4) Vacuum resistance: 0.7 bar (10.5 psi) abs
- 5) Vacuum resistance: 0.5 bar (7.5 psi) abs
- 6) Vacuum resistance: 0 bar (0 psi) abs

Maximum turn down which can be ordered for absolute pressure and gauge pressure sensors

Devices for gauge pressure measurement

- 6 bar (90 psi), 16 bar (240 psi), 25 bar (375 psi): TD 1:1 to TD 2.5:1
- All other measuring ranges: TD 1:1 to TD 5:1

Devices for absolute pressure measurement

- 100 mbar (1.5 psi), 250 mbar (4 psi), 400 mbar (6 psi): TD 1:1
- 1 bar (15 psi): TD 1:1 to TD 2.5:1
- All other measuring ranges: TD 1:1 to TD 5:1

Metal process isolating diaphragm

Sensor	Device	Maximum Sensor meas	uring range	Lowest calibratable	MWP	OPL	Factory settings ²⁾	Option 3)
		lower (LRL)	upper (URL)	span ¹⁾				
		[bar (psi)]	[bar (psi)]	[bar (psi)]	[bar (psi)]	[bar (psi)]		
Devices for gauge pre	Devices for gauge pressure measurement							
400 mbar (6 psi) 4)	PTP31B	-0.4 (-6)	+0.4 (+6)	0.4 (6)	1 (15)	1.6 (24)	0 to 400 mbar (0 to 6 psi)	1F
1 bar (15 psi) 4)	PTP31B	-1 (-15)	+1 (+15)	0.4 (6)	2.7 (40.5)	4 (60)	0 to 1 bar (0 to 15 psi)	1H
2 bar (30 psi) 4)	PTP31B	-1 (-15)	+2 (+30)	0.4 (6)	6.7 (100.5)	10 (150)	0 to 2 bar (0 to 30 psi)	1K
4 bar (60 psi) 4)	PTP31B	-1 (-15)	+4 (+60)	0.8 (12)	10.7 (160.5)	16 (240)	0 to 4 bar (0 to 60 psi)	1M
10 bar (150 psi) 4)	PTP31B	-1 (-15)	+10 (+150)	2 (30)	25 (375)	40 (600)	0 to 10 bar (0 to 150 psi)	1P
40 bar (600 psi) 4)	PTP31B	-1 (-15)	+40 (+600)	8 (120)	100 (1500)	160 (2400)	0 to 40 bar (0 to 600 psi)	1S
100 bar (1500 psi) 4)	PTP31B	-1 (-15)	+100 (+1500)	20 (300)	100 (1500)	160 (2400)	0 to 100 bar (0 to 1500 psi)	1U
400 bar (6000 psi) 4)	PTP31B	-1 (-15)	+400 (+6000)	80 (1200)	400 (6000)	600 (9000)	0 to 400 bar (0 to 6000 psi)	1W
Devices for absolute p	ressure m	easurement						
400 mbar (6 psi) 4)	PTP31B	0 (0)	0.4 (+6)	0.4 (6)	1 (15)	1.6 (24)	0 to 400 mbar (0 to 6 psi)	2F
1 bar (15 psi) 4)	PTP31B	0 (0)	1 (+15)	0.4 (6)	2.7 (40.5)	4 (60)	0 to 1 bar (0 to 15 psi)	2H
2 bar (30 psi) 4)	PTP31B	0 (0)	2 (+30)	0.4 (6)	6.7 (100.5)	10 (150)	0 to 2 bar (0 to 30 psi)	2K
4 bar (60 psi) 4)	PTP31B	0 (0)	4 (+60)	0.8 (12)	10.7 (160.5)	16 (240)	0 to 4 bar (0 to 60 psi)	2M
10 bar (150 psi) 4)	PTP31B	0 (0)	10 (+150)	2 (30)	25 (375)	40 (600)	0 to 10 bar (0 to 150 psi)	2P
40 bar (600 psi) 4)	PTP31B	0 (0)	+40 (+600)	8 (120)	100 (1500)	160 (2400)	0 to 40 bar (0 to 600 psi)	2S
100 bar (1500 psi) 4)	PTP31B	0 (0)	+100 (+1500)	20 (300)	100 (1500)	160 (2400)	0 to 100 bar (0 to 1500 psi)	2U
400 bar (6000 psi) 4)	PTP31B	0 (0)	+400 (+6000)	80 (1200)	400 (6000)	600 (9000)	0 to 400 bar (0 to 6000 psi)	2W

- 1) Highest turn down that can be set at the factory: 5:1. The turn down is preset and cannot be changed.
- 2) Other measuring ranges (e.g. -1 to +5 bar (-15 to 75 psi)) can be ordered with customer-specific settings (see the Product Configurator, order code for "Calibration; Unit" option "U"). It is possible to invert the output signal (LRV = 20 mA; URV = 4 mA). Prerequisite: URV < LRV
- 3) Product Configurator, order code for "Sensor range"
- 4) Vacuum resistance: 0.01 bar (0.145 psi) abs

Maximum turn down which can be ordered for absolute pressure and gauge pressure sensors Ranges 0.5%/0.3%: TD 1:1 to TD 5:1

Output

Output signal

Designation	Option 1)
PNP switch output + 4 to 20 mA output (4-wire), IO-Link	7
PNP switch output (3-wire)	4
2 x PNP switch output (4-wire), IO-Link	8

1) Product Configurator, order code for "Output"

Range of adjustment

Switch output

Switch point (SP): 0.5 to 100 % in increments of 0.1% (min. 1 mbar * (0.015 psi)) of the upper range limit (URL) switchback point (RSP): 0 to 99.5% in increments of 0.1% (min. 1 mbar * (0.015 psi)) of the upper range limit (URL)

Minimum distance between SP and RSP: 0.5 % URL

Analog output (if available)

Lower range value (LRV) and upper range value (URV) can be set anywhere within the sensor range (LRL - URL). Turn down for analog output up to 5:1 of upper sensor limit (URL).

Factory setting (if no customer-specific setting is ordered):
 Switch point SP1: 90 %; switchback point RP1: 10 %;

Switch point SP2: 95 %; switchback point RP2: 15 %;

Analog output: LRV 0 %; URV 100 %

Switching capacity

- Switch state ON: $I_a \le 250$ mA; switch state OFF: $I_a \le 1$ mA
- Devices with IO-Link: Switch state ON ¹⁾: $I_a \le 200 \text{ mA}^{2}$; switch state OFF: $I_a \le 100 \text{ }\mu\text{A}$
- Switch cycles: >10,000,000
- Voltage drop PNP: ≤2 V
- Overload protection: Automatic load testing of switching current;
 - Max. capacitive load: $14 \mu F$ at max. supply voltage (without resistive load)
 - Devices with IO-Link: Max. capacitive load: $1\,\mu\text{F}$ at max. supply voltage (without resistive load)
 - Max. cycle duration: 0.5 s; min. t_{on}: 4 ms
- Max. cycle duration: 0.5 s; min. t_{on}: 40 μs
- Periodic disconnection from protective circuit in the event of overcurrent (f = 2 Hz) and "F804" displayed

Signal range 4 to 20 mA

3.8 mA to 20.5 mA

Load (for devices with analog output)


In order to guarantee sufficient terminal voltage, a maximum load resistance R_L (including line resistance) must not be exceeded depending on the supply voltage U_B of the supply unit.

The maximum load resistance depends on the terminal voltage and is calculated according to the following formula:

^{*} For measuring ranges with a negative gauge pressure up to 4 bar (60 psi), the increment when setting the switch point is min. 10 mbar (0.15 psi)

^{1) 100} mA can be guaranteed over the entire temperature range for the switch outputs "2 x PNP" and "1 x PNP + 4 to 20 mA output". For lower ambient temperatures, higher currents are possible but cannot be guaranteed. Typical value at 20 °C (68 °F) approx. 200 mA. 200 mA can be guaranteed over the entire temperature range for the "1 x PNP" current output.

²⁾ Larger currents are supported, thus deviating from the IO-Link standard.

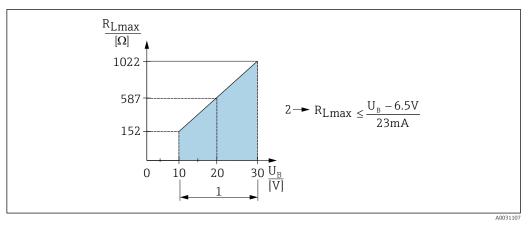

1 Power supply 10 to 30 V DC

2 R_{Lmax} maximum load resistance

*U*_B Supply voltage

If load is too great:

- failure current is output and "S803" displayed (output: MIN alarm current)
- Periodic checking to establish if it is possible to quit fault state
- In order to guarantee sufficient terminal voltage, a maximum load resistance RL (including line resistance) must not be exceeded depending on the supply voltage UB of the supply unit.

Signal on alarm 4 to 20 mA

The response of the output to error is regulated in accordance with NAMUR NE43.

The behavior of the current output in the event of faults is defined in the following parameters:

- Alarm current FCU "MIN": Lower alarm current (≤3.6 mA) (optional, see the following table)
- Alarm current FCU "MAX" (factory setting): Upper alarm current (≥21 mA)
- Alarm current FCU "HLD" (HOLD) (optional, see the following table): Last measured current value is held. When the device starts, the current output is set to "Lower alarm current" (≤3.6 mA).


alarm current

Device	Description	Option
PTC31B PTP31B	Adjusted min. alarm current	IA 1)
PTC31B PTP31B	1 low ≤3.6 mA 2 high ≥21 mA 3 last current value	U ²⁾

- 1) Product Configurator order code for "Service"
- 2) Product Configurator order code for "Calibration/unit"

Dead time, time constant

Presentation of the dead time and the time constant:

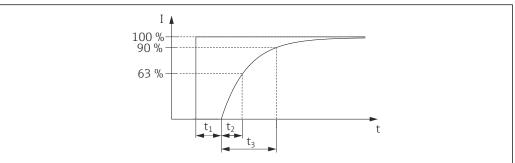

Δ0019786

Dynamic behavior

Analog electronics

Dead time (t ₁) [ms]	Time constant (T63), t ₂ [ms]	Time constant (T90), t ₃ [ms]
7 ms	11 ms	16 ms

Dynamic behavior of switch output

PNP switch output and 2 x PNP switch output: response time \leq 20 ms

Damping

Once the supply voltage has been applied, damping for the first measured value is at 0 i.e. the first measured value applied always corresponds to the actual measured value (regardless of damping).

A damping affects all outputs (output signal, display):

- Via local display, infinitely variable 0 to 999.9 s
- Factory setting: 2.0 s

Power supply


A WARNING

Electrical safety is compromised by an incorrect connection!


- \blacktriangleright In accordance with IEC/EN61010 a separate circuit breaker must be provided for the device .
- Protective circuits against reverse polarity, HF influences and overvoltage peaks are integrated.
- ▶ The device must be operated with a 630 mA fine-wire fuse (slow-blow).

Terminal assignment


1 x PNP switch output R1 (not with IO-Link functionality)

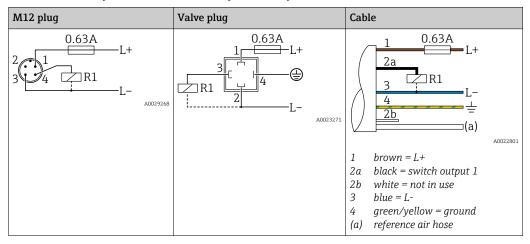

2 x PNP switch output R1 and R2

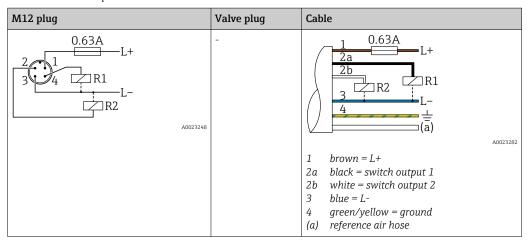

IO-Link: 2 x PNP switch output R1 and R2

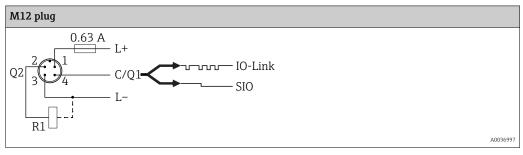

4


(a)

green/yellow = ground

reference air hose

1 x PNP switch output R1 with additional analog output 4 to 20 mA (active)

IO-Link: 1 x PNP switch output R1 with additional analog output 4 to 20 mA (active)

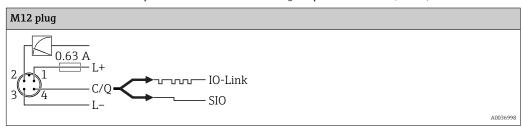

Supply voltage

Supply voltage: 10 to 30 V DC at a DC power unit

Supply voltage IO-Link: 10 to 30 V DC at a DC power unit

IO-Link communication is guaranteed only if the supply voltage is at least 18 V.

Current consumption and alarm signal

Intrinsic power consumption	Alarm current (for devices with analog output) 1)	
≤ 60 mA	≥21 mA (factory setting)	
Devices with IO-Link: Maximum current consumption: ≤ 300 mA		

 Setting min. alarm current ≤3.6mA can be ordered via the product order structure. Min. alarm current ≤3.6mA can be configured at the device or via IO-Link.

Power supply fault

- Behavior in the event of overvoltage (>30 V):
 The device works continuously up to 34 V DC without damage. If the supply voltage is exceeded, the specified characteristics are no longer quaranteed.
- Behavior in the event of undervoltage:If the supply voltage falls below the minimum value, the device switches off in a defined manner.

Electrical connection

Degree of protection

Device	Connection	Degree of protection	Option 1)
PTC31B PTP31B	Cable5 m (16 ft)	IP66/67 NEMA type 4X enclosure	D
PTC31B PTP31B	Cable10 m (33 ft)	IP66/67 NEMA type 4X enclosure	Е
PTC31B PTP31B	Cable25 m (82 ft)	IP66/67 NEMA type 4X enclosure	F
PTC31B PTP31B	M12 plug	IP65/67 NEMA type 4X enclosure	M

Device	Connection	Degree of protection	Option 1)
PTC31B PTP31B	Valve plug ISO4400 M16	IP65 NEMA type 4X enclosure	U
PTC31B PTP31B	Valve plug ISO4400 NPT ½	IP65 NEMA type 4X enclosure	V

1) Product Configurator order code for "Electrical connection"

Cable specification	For valve plug: $< 1.5 \text{ mm}^2$ (16 AWG) and Ø4.5 to 10 mm (0.18 to 0.39 in)	
Residual ripple	The device operates within the reference accuracy up to ± 5 % of the residual ripple of the supply voltage, within the permitted voltage range.	
Influence of power supply	≤0.005 % of the URL/1 V	
Overvoltage protection	The device does not contain any special elements to protect against overvoltage ("wire to ground"). Nevertheless the requirements of the applicable EMC standard EN 61000-4-5 (testing voltage 1kV EMC wire/ground) are met.	

Performance characteristics of ceramic process isolating diaphragm

Reference operating conditions

- As per IEC 60770
- Ambient temperature T_A = constant, in the range of:+21 to +33 °C (+70 to +91 °F)
- Humidity φ = constant, in the range of 5 to 80 % rH
- Ambient pressure p_A = constant, in the range of:860 to 1060 mbar (12.47 to 15.37 psi)
- Position of measuring cell = constant, in range: horizontal $\pm 1^{\circ}$ (see also "Influence of the installation position" section $\rightarrow \triangleq 23$)
- Zero based span
- Material of process isolating diaphragm: Al₂O₃ (aluminum-oxide ceramic, Ceraphire[®])
- Supply voltage: 24 V DC ±3 V DC
- Load: 320Ω (at 4 to 20 mA output)

Measuring uncertainty for small absolute pressure measuring ranges

The smallest extended uncertainty of measurement that can delivered by our standards is:

- in range 1 to 30 mbar (0.0145 to 0.435 psi): 0.4 % of reading
- in range < 1 mbar (0.0145 psi): 1 % of reading.

Influence of the installation position

→ 🖺 23

_____ Resolution

Current output: min. 1.6 μA

Display: can be set (factory setting: presentation of the maximum accuracy of the transmitter)

Reference accuracy

The reference accuracy contains the non-linearity [DIN EN $61298-2\ 3.11$] including the pressure hysteresis [DIN EN $61298-2\ 3.11$] and non-repeatability [DIN EN $61298-2\ 3.11$] in accordance with the limit point method as per [DIN EN 60770].

Device	% of the calibrated span to the maximum turn down		
	Reference accuracy Non-linearity 1) Non-repeatability		
PTC31B - standard	±0.5	±0.1	±0.1
PTC31B - platinum	±0.3	±0.1	±0.1

1) The non-linearity for the 40 bar (600 psi) sensor can be up to \pm 0.15% of the calibrated span up to the maximum turn down.

Overview of the turn down ranges $\rightarrow \implies 12$

Ordering Information

Description	Option 1)
Platinum (on request)	D
Standard	G

Product Configurator, order code for "Reference accuracy"

Thermal change of the zero output and the output span

Measuring cell	-20 to +85 °C (-4 to +185 °F)	-40 to -20 °C (-40 to -4 °F) +85 to +100 °C (+185 to +212 °F)
	% of URL for TD 1:1	
<1 bar (15 psi)	<1	<1.2
≥ 1 bar (15 psi)	<0.8	<1

Long-term stability

1 year	5 years	8 years	
% of URL			
±0.2	±0.4	In preparation	

Switch-on time

 \leq 2 s (For small measuring ranges, pay attention to the thermal compensation effects.)

Performance characteristics of metal process isolating diaphragm

Reference operating conditions

- As per IEC 60770
- Ambient temperature T_A = constant, in the range: +21 to +33 °C (+70 to +91 °F)
- Humidity φ = constant, in the range: 5 to 80 % rH
- Ambient pressure p_A = constant, in the range: 860 to 1060 mbar (12.47 to 15.37 psi)
- Zero based span
- Process isolating diaphragm material: AISI 316L (1.4435)
- Filling oil: synthetic oil polyalphaolefin FDA 21 CFR 178.3620, NSF H1
- Supply voltage: 24 V DC ±3 V DC
- Load: 320 Ω (at 4 to 20 mA output)

Measuring uncertainty for small absolute pressure measuring ranges

The smallest extended uncertainty of measurement that can delivered by our standards is:

- in the range 1 to 30 mbar (0.0145 to 0.435 psi): 0.4 % of reading
- in the range < 1 mbar (0.0145 psi): 1 % of reading.

Influence of the installation position

→ 🖺 23

Resolution

Current output: min. 1.6 µA

Display: can be set (factory setting: presentation of the maximum accuracy of the transmitter)

Reference accuracy

The reference accuracy contains the non-linearity [DIN EN $61298-2\ 3.11$] including the pressure hysteresis [DIN EN $61298-2\ 3.11$] and non-repeatability [DIN EN $61298-2\ 3.11$] in accordance with the limit point method as per [DIN EN 60770].

Device	% of the calibrated span to the maximum turn down		
	Reference accuracy	Non-linearity	Non-repeatability
PTP31B - standard	±0.5	±0.1	±0.1
PTP31B - platinum	±0.3	±0.1	±0.1

Overview of the turn down ranges $\rightarrow \implies 13$

Ordering information

Designation	Option 1)
Platinum (on request)	D
Standard	G

Product Configurator, order code for "Reference accuracy"

Thermal change of the zero output and the output span

Measuring cell	-20 to +85 °C (-4 to +185 °F)	-40 to -20 °C (-40 to -4 °F) +85 to +100 °C (+185 to +212 °F)
	% of the calibrated span for TD 1:1	
<1 bar (15 psi)	<1	<1.2
≥ 1 bar (15 psi)	<0.8	<1

Long-term stability

Device	1 year	5 years	8 years	
	% of URL			
PTP31B	±0.2	±0.4	In preparation	

Switch-on time

≤2 s

The following applies for IO-Link: For small measuring ranges, pay attention to the thermal compensation effects.


Installation

Installation conditions

- Moisture must not penetrate the housing when mounting the device, establishing the electrical connection and during operation.
- Point the cable and connector downwards where possible to prevent moisture from entering (e.g. rain or condensation water).

Influence of the installation position

Any orientation is possible. However, the orientation may cause a zero point shift i.e. the measured value does not show zero when the vessel is empty or partially full.



A0024708

Туре	Process isolating diaphragm axis is horizontal (A)	Process isolating diaphragm pointing upwards (B)	Process isolating diaphragm pointing downwards (C)
PTP31B	Calibration position, no effect	Up to +4 mbar (+0.058 psi)	Up to -4 mbar (-0.058 psi)
PTC31B < 1 bar (15 psi)	Calibration position, no effect	Up to +0.3 mbar (+0.0044 psi)	Up to -0.3 mbar (-0.0044 psi)
PTC31B ≥1 bar (15 psi)	Calibration position, no effect	Up to +3 mbar (+0.0435 psi)	Up to -3 mbar (-0.0435 psi)




A position-dependent zero shift can be corrected on the device .

Mounting location

Pressure measurement

Pressure measurement in gases

Mount the device with shutoff device above the tapping point so that any condensate can flow into the process.

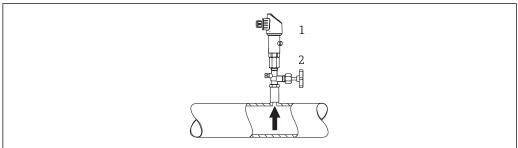

A002E0

- 1 Device
- 2 Shutoff device

Pressure measurement in vapors

For pressure measurement in vapors, use a siphon. The siphon reduces the temperature to almost ambient temperature. Preferably mount the device with the shutoff device and siphon below the tapping point.


Advantage:

- defined water column causes only minor/negligible measuring errors and
- only minor/negligible heat effects on the device.

Mounting above the tapping point is also permitted.

Note the max. permitted ambient temperature of the transmitter!

Take the influence of the hydrostatic water column into consideration.

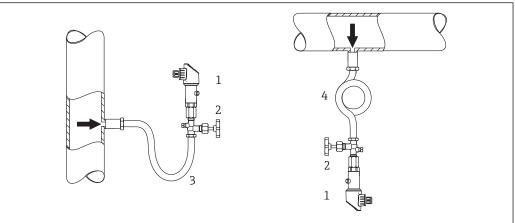

A002592

- 1 Device
- 2 Shutoff device
- 3 Siphon
- 4 Siphon


Pressure measurement in liquids

Mount the device with a shutoff device and siphon below or at the same height as the tapping point.

Advantage:

- defined water column causes only minor/negligible measuring errors and
- air bubbles can be released to the process.

Take the influence of the hydrostatic water column into consideration.

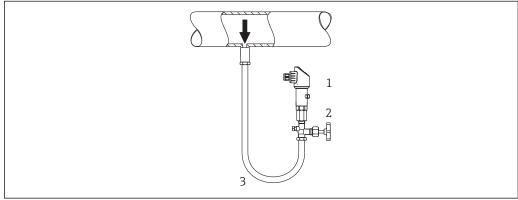


A00259

- 1 Device
- 2 Shutoff device
- 3 Siphon

Level measurement

- Always install the device below the lowest measuring point.
- Do not install the device at the following positions:
 - In the filling curtain
 - In the tank outlet
 - in the suction area of a pump
 - Or at a point in the tank which could be affected by pressure pulses from the agitator.
- A functional test can be carried out more easily if you mount the device downstream from a shutoff device.

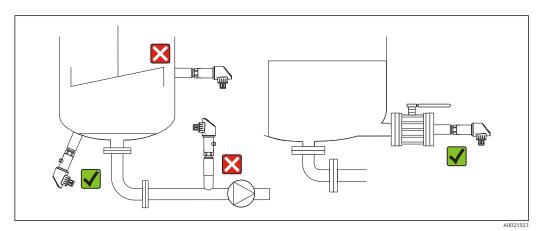

Mounting instructions for oxygen applications

Oxygen and other gases can react explosively to oils, grease and plastics, such that, among other things, the following precautions must be taken:

- All components of the system, such as measuring devices, must be cleaned in accordance with the BAM requirements.
- Dependent on the materials used, a certain maximum temperature and a maximum pressure for oxygen applications must not be exceeded.
- The following table lists devices (devices only, not accessories or enclosed accessories), which are suitable for gaseous oxygen applications.

Device	p _{max} for oxygen applications	T _{max} for oxygen applications	Option 1)
PTC31B	40 bar (600 psi)	-10 to +60 °C (+14 to +140 °F)	НВ

.) Product Configurator, order code for "Service"

Environment

Ambient temperature range

Device	Ambient temperature range 1)		
	-20 to +70 °C (-4 to +158 °F) IO-Link: $-40 to +70 °C (-40 to +158 °F)$ (in the range of the temperature limits with restrictions in optical properties, such as display speed and contrast)		

Exception: the following cable is designed for an ambient temperature range of
 -25 to +70 °C (-13 to +158 °F): Product Configurator order code for "Enclosed accessories" option "RZ".

Storage temperature range

-40 to +85 °C (-40 to +185 °F)

Climate class

Device	Climate class	Note
PTC31B PTP31B	Class 3K5	Air temperature: -5 to $+45$ °C ($+23$ to $+113$ °F), relative humidity: 4 to 95 % satisfied according to IEC $721-3-3$ (condensation not possible)

Degree of protection

Device Connection		Degree of protection	Option 1)
PTC31B PTP31B	Cable5 m (16 ft)	IP66/67 NEMA type 4X enclosure	D
PTC31B PTP31B	Cable10 m (33 ft)	IP66/67 NEMA type 4X enclosure	Е
PTC31B PTP31B	Cable25 m (82 ft)	IP66/67 NEMA type 4X enclosure	F
PTC31B PTP31B	M12 plug	IP65/67 NEMA type 4X enclosure	M
PTC31B PTP31B	Valve plug ISO4400 M16	IP65 NEMA type 4X enclosure	U
PTC31B PTP31B	Valve plug ISO4400 NPT ½	IP65 NEMA type 4X enclosure	V

1) Product Configurator order code for "Electrical connection"

Vibration resistance

Test standard	Vibration resistance
IEC 60068-2-64:2008	Guaranteed for 5 to 2000Hz: 0.05g ² /Hz

Electromagnetic compatibility

- Interference emission as per EN 61326-1 equipment B
- Interference immunity as per EN 61326-1 (industrial environment)
- Devices with IO-Link: For intended use, the switch output can switch to the communication mode for 0.2 s in the event of transient faults.
- NAMUR recommendation EMC (NE21) (not for devices with IO-Link)
- Maximum deviation: 1.5% with TD 1:1

For more details, please refer to the Declaration of Conformity.

Process

Process temperature range for devices with ceramic process isolating diaphragm

Device	Process temperature range
PTC31B	−25 to +100 °C (−13 to +212 °F)

- For saturated steam applications, use a device with a metal process isolating diaphragm, or provide a siphon for temperature isolation when installing.
- Pay attention to the process temperature range of the seal. See also the following table.

Seal	Notes	Process temperature range	Option
FKM	-	-20 to +100 °C (-4 to +212 °F)	A 1)
FKM	Cleaned for oxygen service	-10 to +60 °C (+14 to +140 °F)	A 1) and HB 2)
EPDM 70	-	−25 to +100 °C (−13 to +212 °F)	J 1)

- Product Configurator, order code for "Seal"
- 2) Product Configurator, order code for "Service"

Applications with changes in temperature

Frequent extreme changes in temperatures can temporarily cause measuring errors. Temperature compensation takes place after a few minutes. Internal temperature compensation is faster the smaller the change in temperature and the longer the time interval.

For further information please contact your local Endress+Hauser Sales Center.

Process temperature range for devices with metallic process isolating diaphragm

Device	Process temperature range	
PTP31B	-40 to +100 °C (-40 to +212 °F)	

Applications with changes in temperature

Frequent extreme changes in temperatures can temporarily cause measuring errors. Internal temperature compensation is faster the smaller the change in temperature and the longer the time interval.

For further information please contact your local Endress+Hauser Sales Center.

Pressure specifications

A WARNING

The maximum pressure for the measuring device depends on the lowest-rated element with regard to pressure.

- For pressure specifications, see the "Measuring range" section and the "Mechanical construction" section.
- ► The Pressure Equipment Directive (2014/68/EU) uses the abbreviation "PS". The abbreviation "PS" corresponds to the MWP (maximum working pressure) of the measuring device.
- ▶ MWP (maximum working pressure): The MWP (maximum working pressure) is specified on the nameplate. This value is based on a reference temperature of +20 °C (+68 °F) and may be applied to the device for an unlimited period of time. Observe the temperature dependency of the MWP.
- ▶ OPL (over pressure limit): The test pressure corresponds to the over pressure limit of the sensor and may only be applied temporarily to ensure that the measurement is within the specifications and no permanent damage develops. In the case of sensor range and process connections where the over pressure limit (OPL) of the process connection is smaller than the nominal value of the sensor, the device is set at the factory, at the very maximum, to the OPL value of the process connection. If you want to use the entire sensor range, select a process connection with a higher OPL value
- ▶ Devices with ceramic process isolating diaphragm: avoid steam hammering! Steam hammering can cause zero point drifts. Recommendation: Residue (water droplets or condensation) may remain on the process isolating diaphragm following CIP cleaning and can result in local steam hammering the next time steam cleaning takes place. In practice, drying the process isolating diaphragm (e.g. by blowing) has proved to prevent steam hammering.

Mechanical construction

i

For the dimensions, see the Product Configurator: www.endress.com

Search for product \to click "Configuration" to the right of the product image \to after configuration click "CAD"

The following dimensions are rounded values. For this reason, they may deviate slightly from the dimensions given on www.endress.com.

Design, dimensions

Device height


The device height is calculated from

- the height of the electrical connection
- the height of the housing and
- the height of the individual process connection.

The individual heights of the components are listed in the following sections. To calculate the device height simply add up the individual heights of the components. Where applicable also take into consideration the installation distance (space that is used to install the device). You can use the following table for this purpose:

Section	Page	Height	Example
Electrical connection	→ 🖺 28	(A)	$\phantom{aaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaa$
Housing height	→ 🖺 29	(B)	
Process connection height	→ 🖺 30 → 🖺 33	(C)	A A A
Installation distance	-	(D)	C C A0027269

Electrical connection

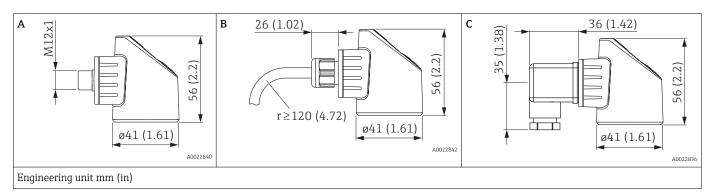



Position	Designation	Material	Weight kg (lbs)	Option 1)
A	M12 plug IP65/67 (Additional dimensions → 🖺 47)	Housing cap made of plastic	0.012 (0.03)	M Plug connector with cable can be ordered as an accessory → 🖺 47
В	Cable5 m (16 ft)	PUR (UL94V0)	0.280 (0.62)	D
В	Cable10 m (33 ft)	PUR (UL94V0)	0.570 (1.26)	Е
В	Cable25 m (82 ft)	PUR (UL94V0)	1.400 (3.09)	F

	Position	Designation	Material	Weight kg (lbs)	Option 1)
	С	M16 valve plug	Plastic PPSU	0.060 (0.14)	U
Ī	С	NPT ½ valve plug Plastic PPSU		0.060 (0.14)	V

1) Product Configurator, order code for "Electrical connection"

Housing

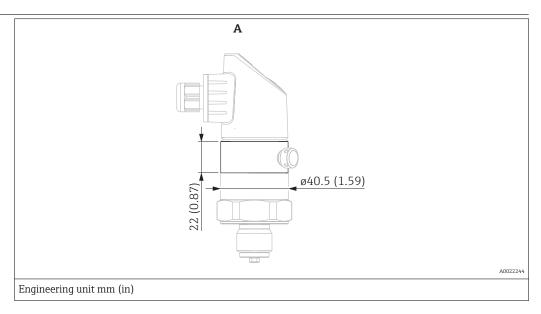


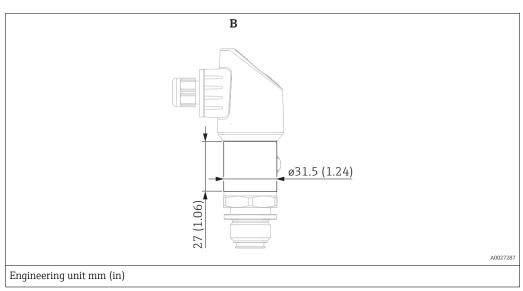

Position	Device	Material	Weight kg (lbs)
A	PTC31B	Stainless steel 316L	0.150 (0.33)
B (up to 100 bar (1500 psi))	PTP31B	Stainless steel 316L	0.090 (0.20)

Process connections with internal, ceramic process isolating diaphragm

Thread ISO 228 G

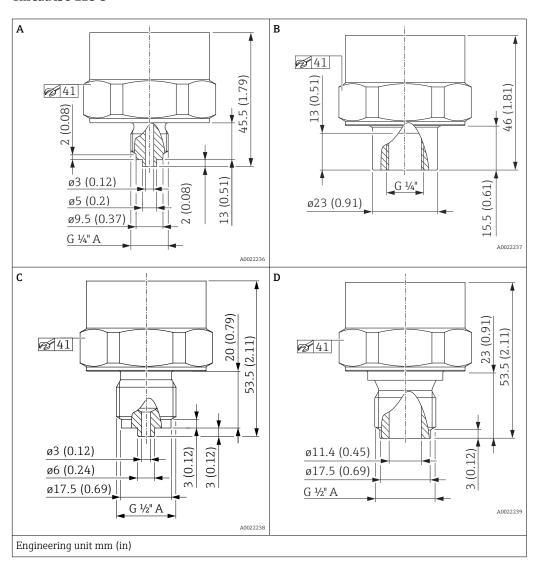


Device	Position	Designation	Material	Weight	Option 1)
				kg (lbs)	
PTC31B	A	Thread ISO 228 G ¼" A, EN 837	316L	0.160 (0.35)	WTJ
PTC31B	В	Thread ISO 228 G ¼" (female)	316L	0.180 (0.40)	WAJ
PTC31B	С	Thread ISO 228 G ½" A, EN 837	316L	0.180 (0.40)	WBJ
PTC31B	D	Thread ISO 228 G 1/2" A, bore11.4 mm (0.45 in)	316L	0.180 (0.40)	wwj

1) Product Configurator, order code for "Process connection"

Process connections with internal, ceramic process isolating diaphragm

Thread ASME

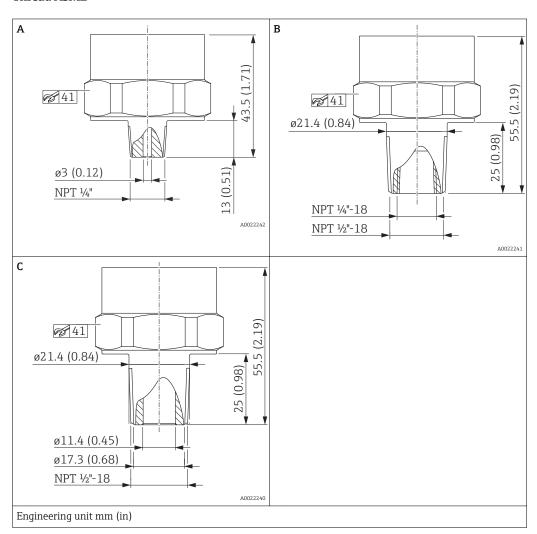


Device	Position	Designation	Material	Weight	Approval	Option 1)
				kg (lbs)		
PTC31B	A	ASME 1/4" MNPT, bore3 mm (0.12 in)	316L	0.160 (0.35)	CRN	VUJ
PTC31B	В	ASME ½" MNPT, ¼" FNPT (female)	316L	0.190 (0.42)	CRN	VXJ
PTC31B	С	ASME ½" MNPT, bore11.4 mm (0.45 in)	316L	0.190 (0.42)	CRN	VWJ

1) Product Configurator, order code for "Process connection"

Process connections with internal, ceramic process isolating diaphragm

Thread DIN13

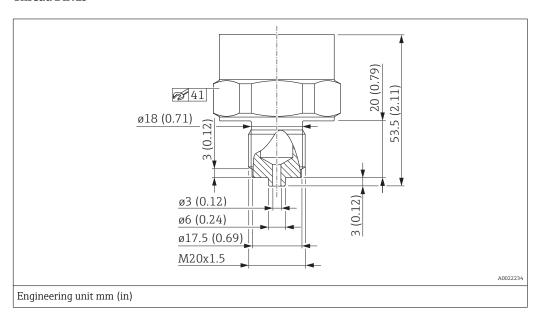


Device	Designation	Material	Weight	Option 1)
			kg (lbs)	
PTC31B	DIN 13 M20 x 1.5, EN 837, bore 3 mm (0.12 in)	316L	0.180 (0.40)	X4J

1) Product Configurator, order code for "Process connection"

Process connections with internal, ceramic process isolating diaphragm

Thread JIS B0203

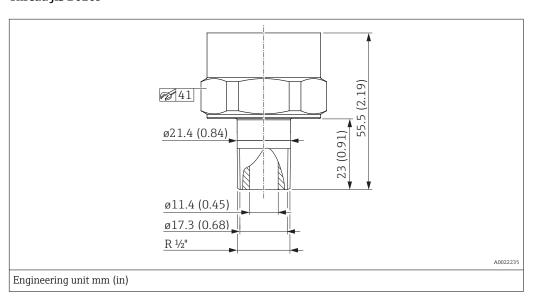


Device	Designation	Material	Weight	Option 1)
			kg (lbs)	
PTC31B	JIS B0203 R 1/2 (male)	316L	0.180 (0.40)	ZJJ

1) Product Configurator, order code for "Process connection"

Process connections with internal, metal process isolating diaphragm

Thread ISO 228 G

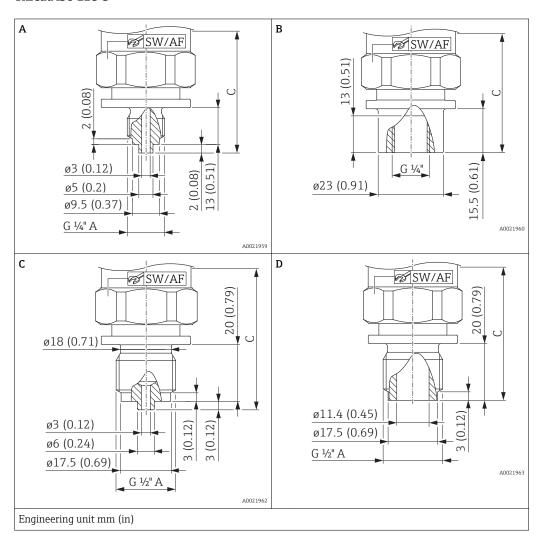


Position	Device	Description	Material				Nominal valu 400 bar (600			Option 1)
				Weight	Height C			Height C	SW/	
				kg (lbs)		AF	kg (lbs)		AF	
A	PTP31B	Thread ISO 228 G 1/4" A, EN 837	316L	0.200 (0.44)	57 (2.24)	32	0.240 (0.53)	69 (2.72)	27	WTJ
В	PTP31B	Thread ISO 228 G ¼" (female)	316L	0.220 (0.49)	57 (2.24)	32	0.260 (0.57)	69 (2.72)	27	WAJ
С	PTP31B	Thread ISO 228 G ½" A, EN 837	316L	0.220 (0.49)	65 (2.56)	32	0.270 (0.60)	77 (3.03)	27	WBJ
D	PTP31B	Thread ISO 228 G ½" A, bore11.4 mm (0.45 in)	316L	0.220 (0.49)	62 (2.44)	32	0.260 (0.57)	74 (2.91)	27	WWJ

1) Product Configurator, order code for "Process connection"

Process connections with internal, metal process isolating diaphragm

Thread ASME

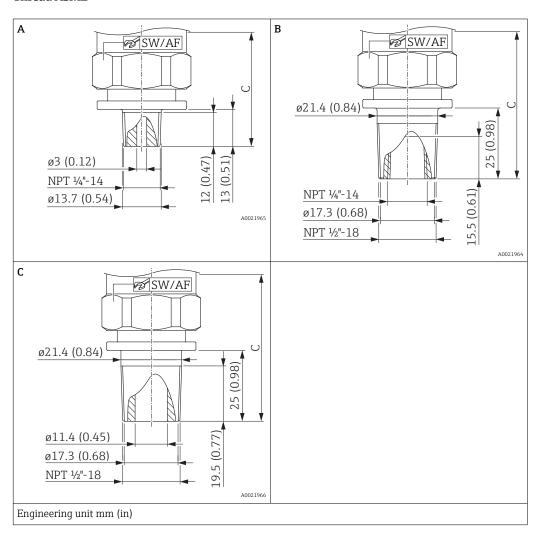


Position	Device	Designation	Material				Nominal valu 400 bar (600		Approval	Option 1)	
				Weight	Height C	SW/	Weight	Height C	SW/		
				kg (lbs)		AF	kg (lbs)		AF		
A	PTP31B	ASME ¼" MNPT, bore3 mm (0.12 in)	316L	0.200 (0.44)	55 (2.17)	32	0.240 (0.53)	67 (2.64)	27	CRN	VUJ
В	PTP31B	ASME ½" MNPT, ¼" FNPT (female)	316L	0.230 (0.51)	67 (2.64)	32	0.260 (0.57)	79 (3.11)	27	CRN	VXJ
С	PTP31B	ASME ½" MNPT, bore11.4 mm (0.45 in)	316L	0.230 (0.51)	67 (2.67)	32	0.270 (0.60)	79 (3.11)	27	CRN	VWJ

¹⁾ Product Configurator, order code for "Process connection"

Process connections with internal, metal process isolating diaphragm

Thread DIN13

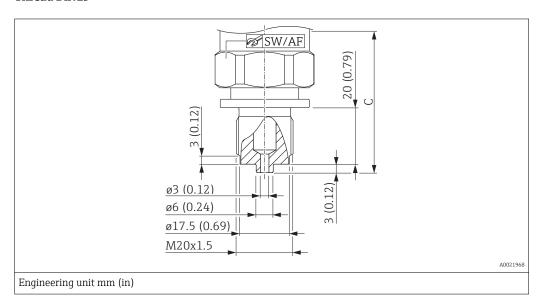


Description	Device	Material			Nominal valu 400 bar (600	Option 1)			
			Weight	Height C	SW/	Weight	Height C	SW/	
			kg (lbs)		AF	kg (lbs)		AF	
DIN 13 M20 x 1.5, EN 837, bore 3 mm (0.12 in)	PTP31B	316L	0.220 (0.49)	65 (2.56)	32	0.260 (0.57)	77 (3.03)	27	X4J

1) Product Configurator, order code for "Process connection"

Process connections with internal, metal process isolating diaphragm

Thread JIS B0203

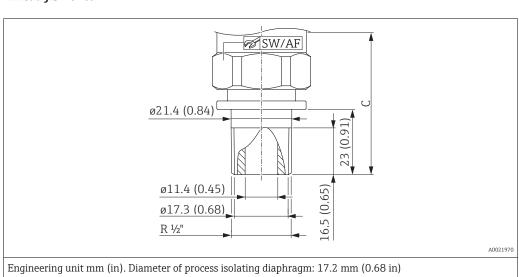


Description	Device	Material				Nominal value 400 bar (6000 p	Option 1)		
			Weight	Height C	SW/	Weight	Height C	SW/	
			kg (lbs)		AF	kg (lbs)		AF	
JIS B0203 R ½" (male)	PTP31B	316L	0.230 (0.51)	65 (2.56)	32	0.260 (0.57)	77 (3.03)	27	ZJJ

1) Product Configurator, order code for "Process connection"


Process connections with flush-mounted, metal process isolating diaphragm

Thread ISO 228 G

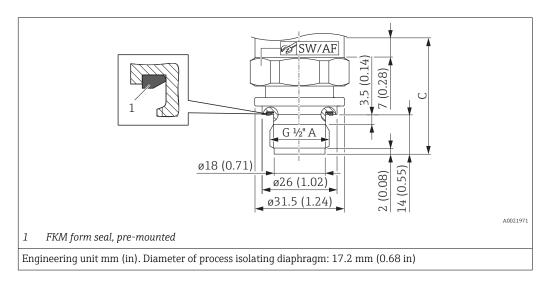

Device	Designation	Material				Nominal value 400 bar (6000 p	Option 1)		
			Weight	Height C	SW/	Weight	Height C	SW/	
			kg (lbs)		AF			AF	
PTP31B	Thread ISO 228 G ½" A DIN3852, shape E	316L	0.140 (0.31)	41 (1.61)	32	0.120 (0.26)	35 (1.38)	32	WJJ

1) Product Configurator, order code for "Process connection"

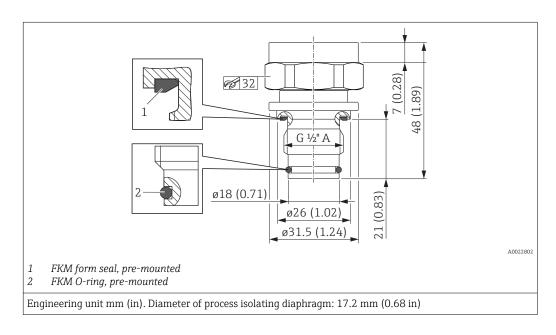

Device 1)	Designation	Material	Weight kg (lbs)	Option 2)
PTP31B	Thread ISO 228 G ½" A O-ring seal, flush-mounted	316L	0.150 (0.33)	WUJ

- 1) Suitable for weld-in adapter 52002643 and 52010172
- 2) Product Configurator, order code for "Process connection"

Materials in contact with process

NOTICE

Device components in contact with the process are listed in the "Mechanical construction" and "Ordering information" sections.

TSE Certificate of Suitability

The following applies to all device components in contact with the process:

- They do not contain any materials derived from animals.
- No additives or operating materials derived from animals are used in production or processing.

Process connections

Endress+Hauser supplies a threaded connection made of stainless steel in accordance with AISI 316L (DIN/EN material number 1.4404 or 1.4435). With regard to their stability-temperature property, the materials 1.4404 and 1.4435 are grouped together under 13E0 in EN 1092-1: 2001 Tab. 18. The chemical composition of the two materials can be identical.

Process isolating diaphragm


Description	Material
Ceramic process isolating diaphragm	Al_2O_3 aluminum-oxide ceramic, Ceraphire $^{\circ}$ FDA, ultrapure 99.9 % (see also www.endress.com/ceraphire) The US Food & Drug Administration (FDA) has no objections to the use of ceramics made from aluminum oxide as a surface material in contact with foodstuffs. This declaration is based on the FDA certificates of our ceramic suppliers.
Metal process isolating diaphragm	AISI 316L (DIN/EN material number 1.4435)

Seals

See the specific process connection.

Materials not in contact with process

Housing

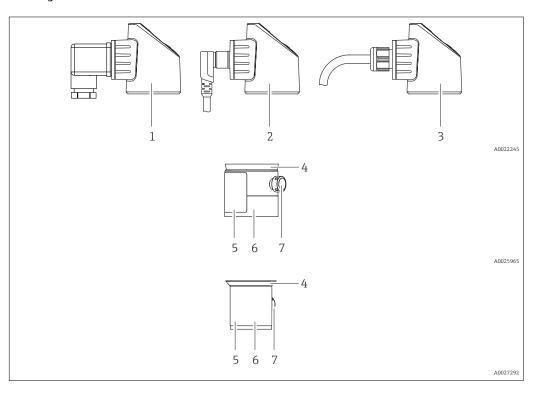

Item number	Component part	Material
1	Housing with valve plug connection	 Seal: NBR Plug: PA Screw: V2A Adapter plate: PBT/PC Housing: PBT/PC
2	Housing prepared for M12 plug connection	 Adapter plate: PBT/PC For other materials, see the "Accessories" section Housing: PBT/PC
3	Housing with cable connection	 Pressure screw: PVDF Seal: TPE-V Cable: PUR (UL 94 V0) Adapter plate: PBT/PC Housing: PBT/PC
4	Design element	PBT/PC
5	Nameplates	Plastic foil (attached to housing) or directly lasered onto the housing
6	Housing	316L (1.4404)
7	Pressure compensation element	PBT/PC

Filling oil

Device	Filling oil
PTP31B	Synthetic oil polyalphaolefin FDA 21 CFR 178.3620, NSF H1

Cleaning

Device	Description	Option 1)
PTC31B PTP31B	Cleaned from oil+grease	НА
PTC31B	Cleaned for oxygen service	НВ

1) Product Configurator, order code for "Service"

Operability

IO-Link (optional)

Operating concept for devices with IO-Link

Operator-oriented menu structure for user-specific tasks

Quick and safe commissioning

Guided menus for applications

Reliable operation

Operation in the following languages:

Via IO-Link: English

Efficient diagnostics increase measurement availability

- Remedial measures
- Simulation options

IO-Link information

IO-Link is a point-to-point connection for communication between the measuring device and an IO-Link master. The measuring device features an IO-Link communication interface type 2 with a second IO function on pin 4. This requires an IO-Link-compatible assembly (IO-Link master) for operation. The IO-Link communication interface enables direct access to the process and diagnostic data. It also provides the option of configuring the measuring device on the fly.

Physical layer, the measuring device supports the following features:

- IO-Link specification: version 1.1
- IO-Link Smart Sensor Profile 2nd Edition (supports minimum scope of IdentClass)
- SIO mode: yes
- Speed: COM2; 38.4 kBaud
- Minimum cycle time: 2.5 msec.
- Process data width: 32 bit
- IO-Link data storage: yes
- Block parameterization: yes

IO-Link download

http://www.endress.com/download

- Select "Software" as the media type.
- Select "Device Driver" as the software type.
 Select IO-Link (IODD).
- In the "Text Search" field enter the device name.

https://ioddfinder.io-link.com/

Search by


- Manufacturer
- Article number
- Product type

Operation with local display

Overview

A 1-line liquid crystal display (LCD) is used for display and operation. The local display shows measured values, fault messages and information messages and therefore supports the user through each operating step.

During measuring operation, the display shows measured values, fault messages and notice messages. In addition, it is possible to switch to menu mode via the operating keys.

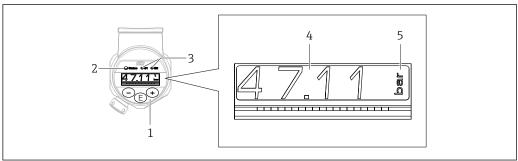

- Operating keys
- Status LED
- Switch output LEDs
- Measured value
- 5 Unit

The second switch output is not used for the device version with current output.

Functions:

- 4-digit measured value display and decimal point
- Simple and complete menu quidance due to breakdown of parameters into several levels and
- Possibility to configure the display in accordance with individual wishes and requirements
- Comprehensive diagnostic functions (fault and warning message, peak-hold indicators, etc.)
- Quick and safe commissioning
- The device also signals the status via LEDs.

Information on the operational states

Operational states	Function of status-LED and onsite display	
Operation	 Status LED is lit green LEDs of switch output 1 and switch output 2 signal the status of each switch output No activity of LED for switch output 2 if current output is active White background lighting 	
Problem	 Status LED lit steady red Red display background LED of switch output 1 and switch output 2 off (switch output is deactivated) 	
Warning	 Status LED flashing red White display background LEDs of switch output 1 and switch output 2 signal the status of each switch output 	
For Device Search	■ The green LED is lit (= operational) on the device and starts to flash with increased luminosity. Flash frequency	
IO-Link communication	 Status LED flashes green as per IO-Link specification (regardless of measuring operation, error or warning). Flash frequency	

Device Search (IO-Link)


The Device Search parameter is used to uniquely identify the device during installation.

Functions of switch output

The switch output can be used for two-point control (hysteresis) or for monitoring a process pressure range (window function).

Hysteresis

Sample explanation. Device with two switch outputs.

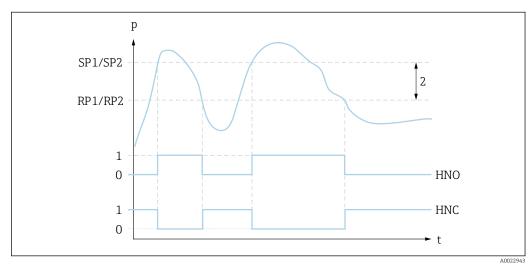

■ 1 SP1/SP2: switch point 1/2; RP1/RP2: switch-back point 1/2

- 0 O-signal. Output open in quiescent state.
- 1 1-signal. Output closed in quiescent state.
- 2 Hysteresis

HNO Closing

HNC NC contact

Description


When the set switch point "SP1/SP2" is reached (with increasing pressure), an electrical signal change takes place at the switch output.

When the set switchback point "RP1/RP2" is reached (with decreasing pressure), an electrical signal change takes place at the switch output.

The difference between the value of the switch point "SP1/SP2" and the switchback point "RP1/RP2" is known as the hysteresis.

Window function

Sample explanation. Device with two switch outputs.

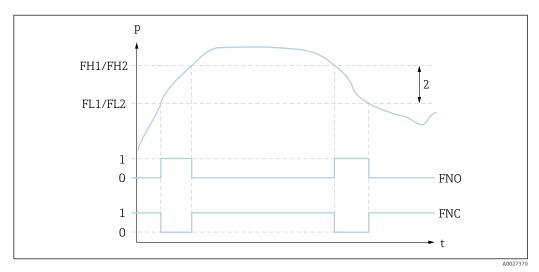

■ 2 FH1/FH2: upper value of pressure window; FL1/FL2: lower value of pressure window

- 0 *O-signal. Output open in quiescent state.*
- 1 1-signal. Output closed in quiescent state.
- 2 Pressure window (difference between the value of the high window "FH1/FH2" and the low window "FL1/FL2")

FNO Closing FNC NC contact

Description

When the lower value of the pressure window "FL1/FL2" is reached (with increasing or decreasing pressure), an electrical signal change takes place at the switch output.

When the upper value of the pressure window "FH1/FH2" is reached (with increasing or decreasing pressure), an electrical signal change takes place at the switch output.

The difference between the upper value of the pressure window "FH1/FH2" and the lower value of the pressure window "FL1/FL2" is known as the pressure window.

Certificates and approvals

CE mark

The device meets the legal requirements of the relevant EC directives. Endress+Hauser confirms that the device has been successfully tested by applying the CE mark.

RoHS

The measuring system complies with the substance restrictions of the Restriction on Hazardous Substances Directive 2011/65/EU (RoHS 2).

RCM-Tick marking

The supplied product or measuring system meets the ACMA (Australian Communications and Media Authority) requirements for network integrity, interoperability, performance characteristics as well as health and safety regulations. Here, especially the regulatory arrangements for electromagnetic compatibility are met. The products are labelled with the RCM- Tick marking on the name plate.



A002956

Pressure Equipment Directive 2014/68/EU (PED)

Pressure equipment with allowable pressure ≤ 200 bar (2 900 psi)

Pressure equipment (with a maximum allowable pressure PS \leq 200 bar (2 900 psi)) can be classified as pressure accessories in accordance with Pressure Equipment Directive 2014/68/EU. If the maximum allowable pressure is \leq 200 bar (2 900 psi) and the pressurized volume of the pressure equipment is \leq 0.1 l, the pressure equipment is subject to the Pressure Equipment Directive (cf. Pressure Equipment Directive 2014/68/EU, Article 4, point 3). The Pressure Equipment Directive only requires that the pressure equipment shall be designed and manufactured in accordance with the "sound engineering practice of a Member State".

Reasons:

- Pressure Equipment Directive (PED) 2014/68/EU Article 4, point 3
- Pressure equipment directive 2014/68/EU, Commission's Working Group "Pressure", Guideline A-05 + A-06

Note:

A partial examination shall be performed for pressure instruments that are part of safety equipment for the protection of a pipe or vessel from exceeding allowable limits (safety accessory in accordance with Pressure Equipment Directive 2014/68/EU, Article 2, point 4).

Pressure equipment with allowable pressure > 200 bar (2900 psi)

Pressure equipment designated for application in every process fluid having a pressurized volume of $<0.1\,l$ and a max. allowable pressure PS $>200\,b$ bar (2 900 psi) must satisfy the essential safety requirements set out in Annex I of the Pressure Equipment Directive 2014/68/EU. According to Article 13 pressure equipment shall be classified by category in accordance with Annex II. Taking into account the low pressurized volume discussed above, the pressure devices are classed as category I pressure equipment. These devices must then bear the CE marking.

Reasons:

- Pressure Equipment Directive 2014/68/EU, Article 13, Annex II
- Pressure equipment directive 2014/68/EU, Commission's Working Group "Pressure", Guideline A-05

Note:

A partial examination shall be performed for pressure instruments that are part of safety equipment for the protection of a pipe or vessel from exceeding allowable limits (safety accessory in accordance with Pressure Equipment Directive 2014/68/EU, Article 2, point 4).

The following also applies:

PTP31B with threaded connection and internal process isolating diaphragm PN > 200:

Suitable for stable gases in group 1, category I, module A

Other standards and guidelines

The applicable European guidelines and standards can be found in the relevant EU Declarations of Conformity. The following standards were also applied:

DIN EN 60770 (IEC 60770):

Transmitters for use in industrial process control systems Part 1: Methods for performance evaluation

Methods for evaluating the performance of transmitters for control and regulation in industrial process control systems.

DIN 16086:

Electrical pressure measuring instruments, pressure sensors, pressure transmitters, pressure measuring instruments, concepts, specifications on data sheets

Procedure for writing specifications in data sheets for electrical pressure measuring instruments, pressure sensors and pressure transmitters.

EN 61326-X:

EMC product family standard for electrical equipment for measurement, control and laboratory use.

EN 60529:

Degrees of protection provided by enclosures (IP code)

NAMUR - User association of automation technology in process industries.

- NE21 Electromagnetic Compatibility (EMC) of Industrial Process and Laboratory Control Equipment.
- NE43 Standardization of the Signal Level for the Failure Information of Digital Transmitters.
- ${\tt NE44-Standardization\ of\ Status\ Indicators\ on\ PCT\ Instruments\ with\ the\ Help\ of\ Light\ Emitting\ Diodes}$
- NE53 Software of Field Devices and Signal-processing Devices with Digital Electronics
- NE107 Self-monitoring and Diagnosis of Field Devices

VDMA 24574-1:2008-04

Fluid technology terms, menu navigation and electrical connection for fluid sensors, Part 1: Pressure switches

CRN approval

A CRN approval is available for some device versions. A CRN-approved process connection with a CSA approval must be ordered for a CRN-approved device. The CRN-approved devices are assigned the registration number 0F18141.5C.

Ordering information: Product Configurator, order code for "Process connection" (the CRN process connections are indicated appropriately in the "Mechanical construction" section.)

Calibration unit

Designation	Option 1)
Sensor range; %	A
Sensor range; mbar/bar	В
Sensor range; kPa/MPa	С
Sensor range; psi	F
Switch 1; see additional spec.	S
Switch 1 + 2; see additional spec.	Т
Switch, analog output; see additional spec.	U

1) Product Configurator, order code for "Calibration; unit"

Calibration

Designation	Option 1)
3-point certificate of calibration	F3

1) Product Configurator order code for "Calibration"

Inspection certificates

Device	Designation	Option 1)
PTC31B PTP31B	3.1 Material documentation, wetted metal parts, EN10204-3.1 inspection certificate	JA

1) Product Configurator, order code for "Test, Certificate"

Ordering information

Detailed ordering information is available from the following sources:

- In the Product Configurator on the Endress+Hauser website: www.endress.com -> Click "Corporate" -> Select your country -> Click "Products" -> Select the product using the filters and search field -> Open product page -> The "Configure" button to the right of the product image opens the Product Configurator.
- From your Endress+Hauser Sales Center: www.addresses.endress.com



Product Configurator - the tool for individual product configuration

- Up-to-the-minute configuration data
 - Depending on the device: Direct input of measuring point-specific information such as measuring range or operating language
 - Automatic verification of exclusion criteria
 - Automatic creation of the order code and its breakdown in PDF or Excel output format
 - Ability to order directly in the Endress+Hauser Online Shop

Scope of delivery

- Measuring device
- Optional accessories
- Brief Operating Instructions
- Certificates

Accessories

Weld-in adapter


Various weld-in adapters are available for installation in vessels or pipes.

Device	Description	Option 1)	Order number
PTP31B	Weld-in adapter G½, 316L	QA	52002643
PTP31B	Weld-in adapter G½, 316L 3.1 EN10204-3.1 material, inspection certificate	QB	52010172
PTP31B	Weld-in tool adapter G½, brass	QC	52005082

1) Product Configurator, order code for "Enclosed accessories"

If installed horizontally and weld-in adapters with a leakage hole are used, ensure that the leakage hole is pointing down. This allows leaks to be detected as quickly as possible.

M12 plug connectors

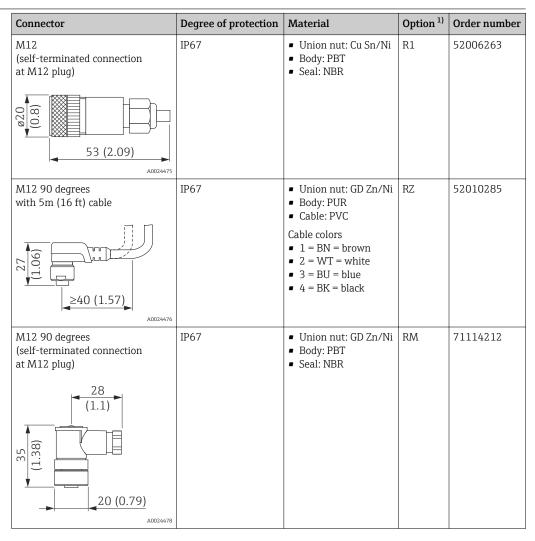

1) Product Configurator, order code for "Enclosed accessories"

D		
11001	1mar	1tation
טטעו	allici.	ıtation

Field of Activities	Pressure measurement, powerful instruments for process pressure, differential pressure, level and flow:
	FA00004P
Technical Information	 TI00241F: EMC Test Procedures TI00426F: Weld-in adapters, process adapters and flanges (overview)
Operating Instructions	BA01270P
	Devices with IO-Link: BA01911P
Brief Operating Instructions	KA01163P
	Devices with IO-Link: KA01404P

Registered trademarks

IO-Link

is a registered trademark of the IO-Link company group.



www.addresses.endress.com

